
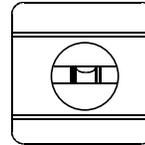


# SmartPet

## Premium Products

### Door Mount Installation Instructions

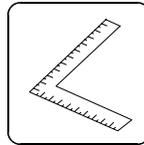

Check package for the following items:  
**Pet Door Kit: (Discard Door Mount Instructions)**

- 1 – prehung pet door with interior frame
- 1 – exterior frame
- Med: 16 phillips head screws
- Lrg: 16 phillips head screws
- XL: 20 phillips head screws



Hollow core doors will require shimming to prevent the door from crushing during installation.



Determine if the door is a hollow core door

Determine the height of your pet door installation.





**Note:** The optimum height for installation is 4 – 6 inches. Take into account the size of your pet.

#### Cutout Sizes:

The size of the Pet Door will determine the size of the cutout to be made. Cutout size is 3/8" larger than the pet door opening size.

Cutout sizes are as follows:

Medium	10 3/8" x 13 3/8"
Large	13 3/8" x 16 3/8"
X Large	15 3/8" x 20 3/8"

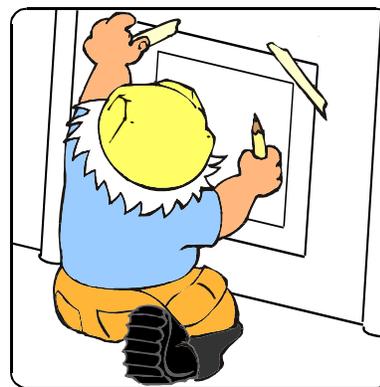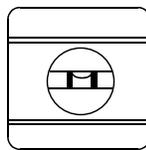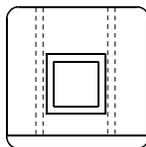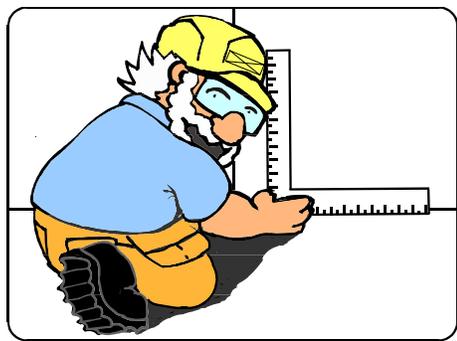

Use the pet door box to create your template based on the cutout sizes listed above right.

Center template at desired Pet Door height and tape in place, trace the pet door pattern.

Before continuing, check that the pattern is square and centered.

# SmartPet

## Premium Products

### Door Mount Installation Instructions continued

From the bottom right hand corner of the pattern traced on the door, mark a spot to drill for the lock, 7/16" to the right of the line and 2 1/4" up from the bottom line.

Once you have successfully marked where the Pet Door is to be installed, drill holes inside of all four corners and in the spot marked for the lock with a 1" drill bit.

Use the holes you just drilled to insert the jigsaw and begin cutting along the line you drew.

**Initially, install all the frame parts using only the center screw.** Insert prehung pet door into cut out form



*Do not over-tighten the screws because it could cause the door to seal improperly. If this occurs simply un-tighten until the frame straightens out.*

Move to the exterior frame.






**Insert the frame until the top, bottom, and side flanges meet with the face of the interior frame.**

Exterior frame with flanges on top and bottom must extend through the interior frame face on top and bottom so that the flanges leading edge is flush with the interior frame face. When this occurs, the interior frame face with flanges on both sides will extend through the exterior frame face on both sides so that its flanges leading edge is also flush with the exterior frame face.

**Note:** Your frames must join together the way described previously before you begin to install the screws for the exterior frame!

Attach exterior frame with Phillips head screws provided.

**Note 1:** If you discover your door is hollow, insert pieces of wood into the door core to prevent from crushing during installation.

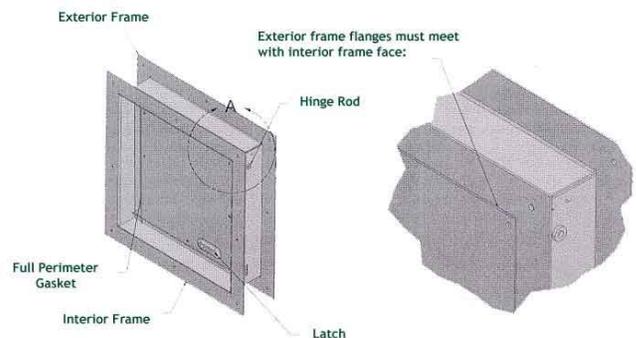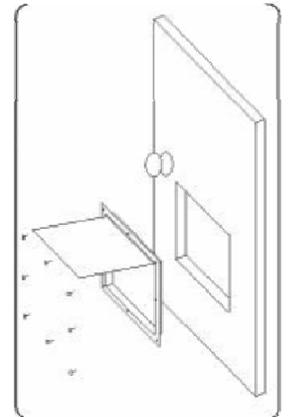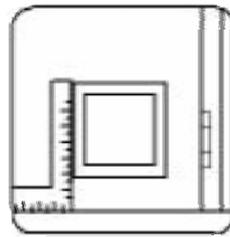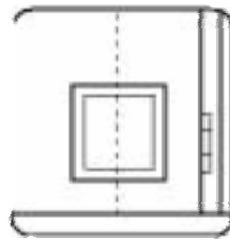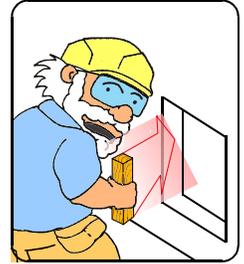

### Lifetime/Limited Warranty

SmartPet Products Insulated SmartPet Doors must be installed in accordance with the manufacturer's printed instructions. The SmartPet Door is guaranteed against defects in materials and workmanship for the lifetime from the date of purchase. Defective parts may be returned to SmartPet products, freight prepaid, for repair or replacement. The decision of repair or replacement is up to the discretion of SmartPet Products. This guarantee does not cover labor or materials costs incurred by reinstallation of repaired or replaced parts. Gasketing and window breakage are excluded from the coverage.